



Milesight-Troubleshooting FTP

Milesight Technology Co.,Ltd.

Camera Version	XX.7.0.66	Update	2018.8.08
-----------------------	------------------	---------------	------------------

1. What is FTP

The File Transfer Protocol (FTP) is a standard network protocol used for transfer computer files from one host to another host over a TCP-based network, such as the Internet. FTP is built on a client-server architecture and uses separate control and data connections between the client and the server.

2. How to Use FTP on Milesight Camera

In order to use the FTP on the camera, we need to use the FTP server. (FTP server provides services based on FTP protocol. When it is running, users can connect to the server to download files, also can upload files to the FTP server.)

The following takes Serv-U software for example.

Step1: Download and install the Serv-U software.

Step2: Start the Serv-U software.

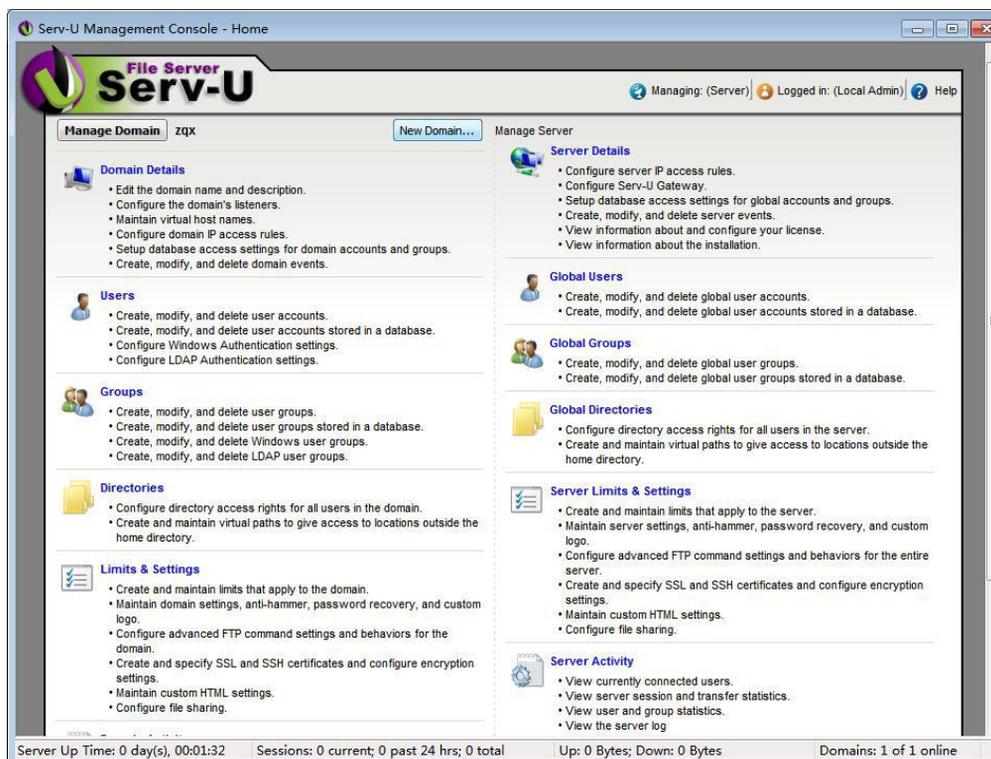


Figure 1

Step3: Click “Domain Details”, input “Name” and “Domain Home Directory”.

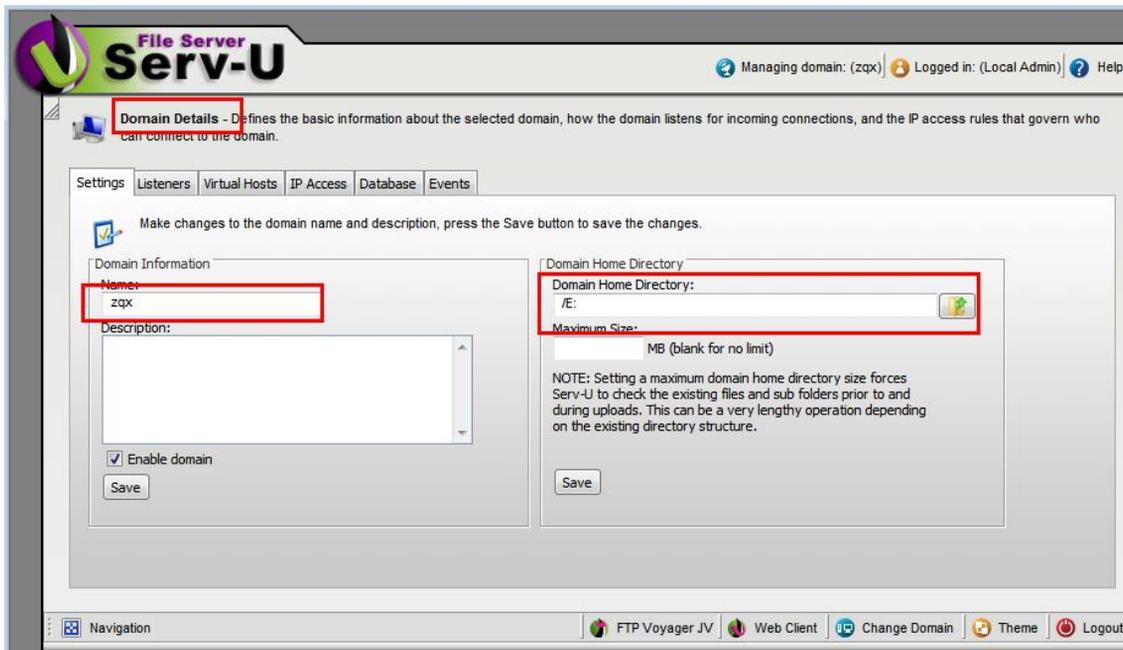


Figure 2

Step4: Back to the home page, click on the “Users” to create the user information.

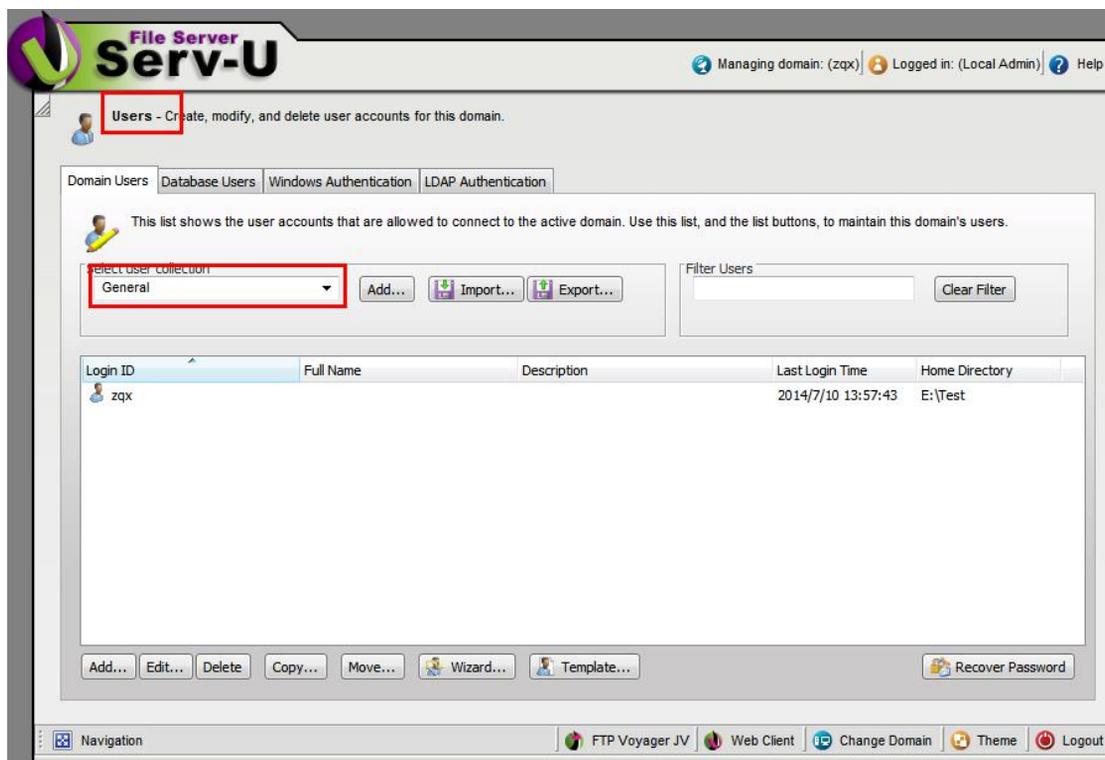


Figure 3

Step5: Click the “Wizard” to create a user, set the user name (figure 4).

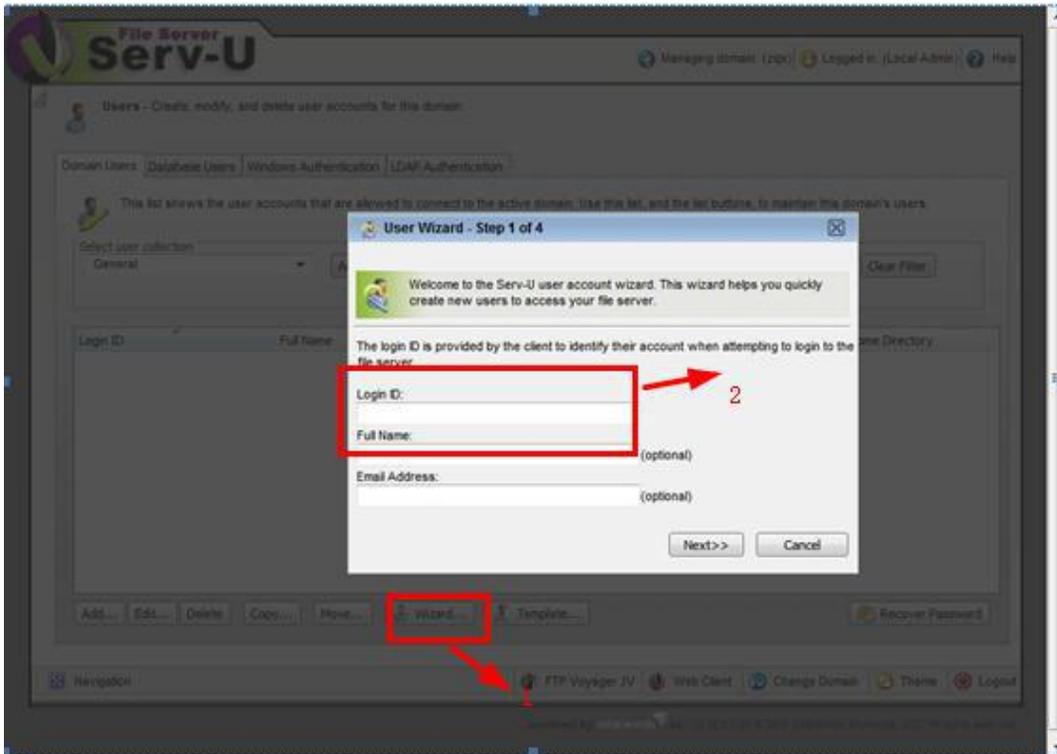


Figure 4

Step6: Set password.

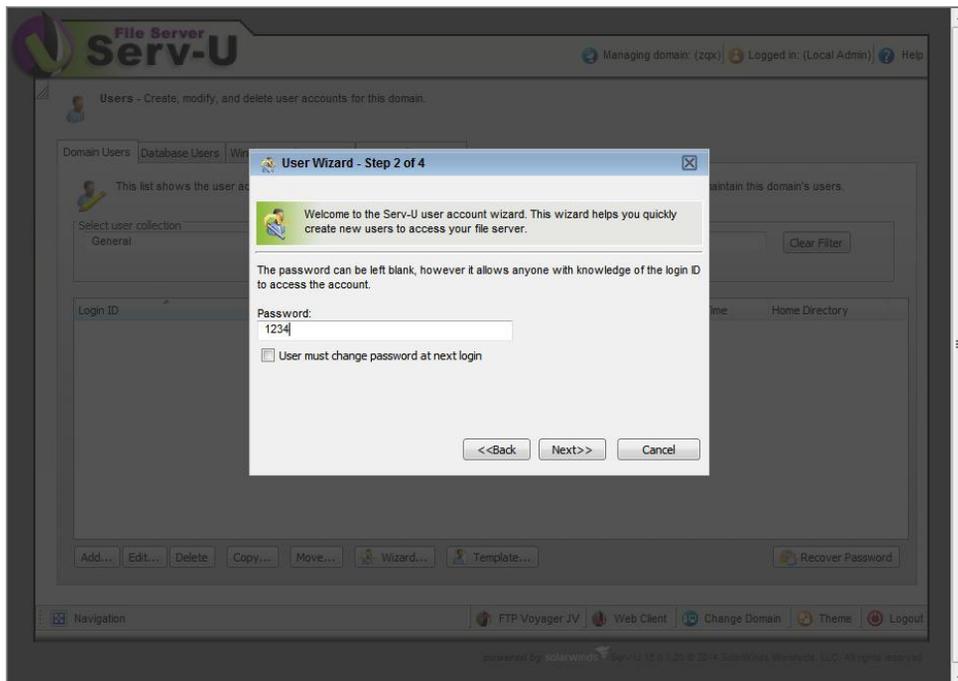


Figure 5

Step7: Select the root directory: E:\Test, click “Lock to the root directory”.

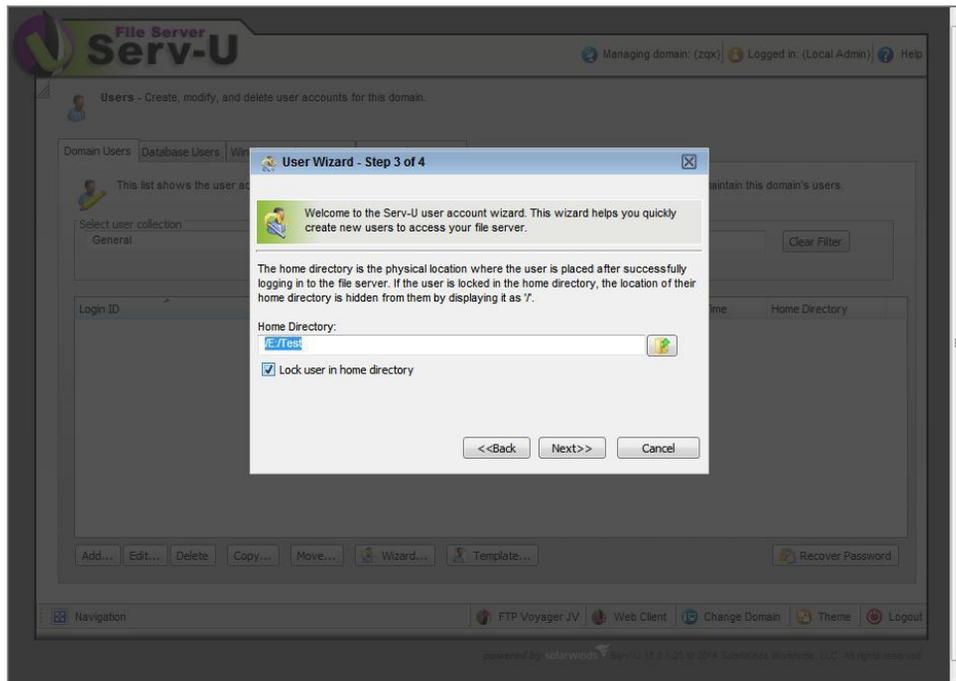


Figure 6

Step8: Click “Next”, choose “Full Access” and click “Finish”.You can follow the same steps to create different users.

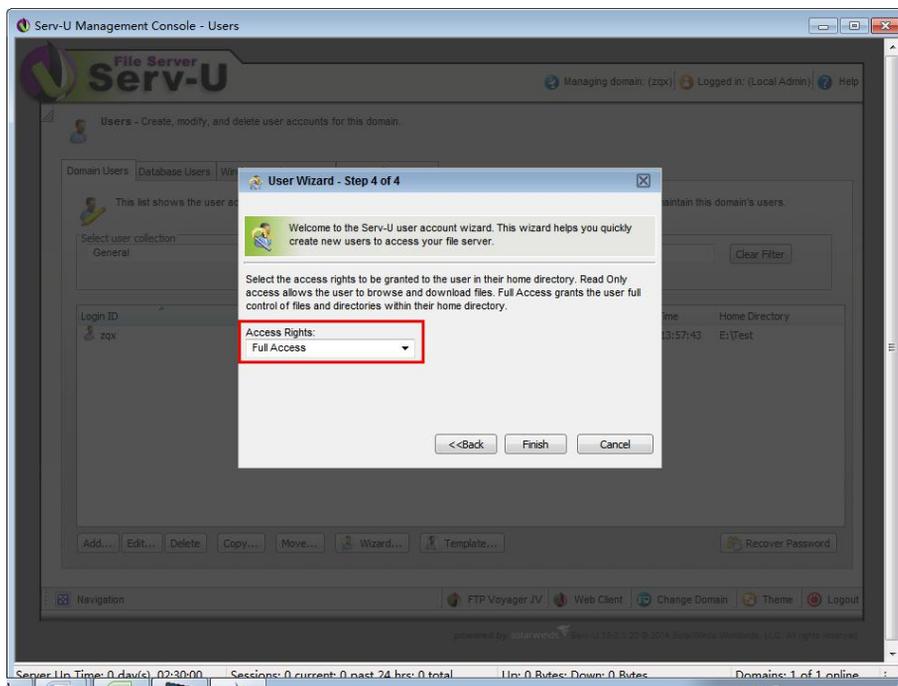


Figure 7

Step9: Back to home page, set “Directory Access Rules”.

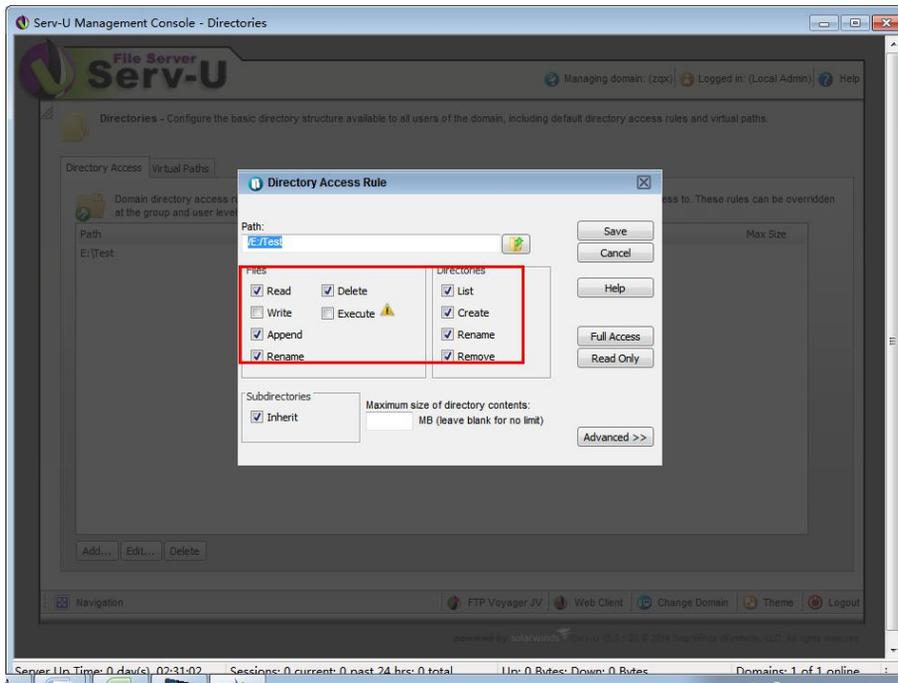


Figure 8

Step10: Log in camera web site, enter the FTP information. (figure 9).

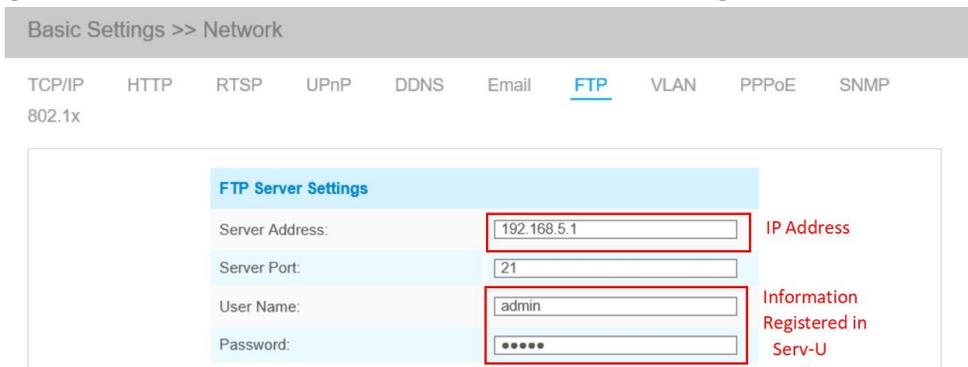


Figure 9

Step11: You can customize Multilevel Folder in FTP Storage Settings interface, as shown in Figure 10.

FTP Storage Settings	
Storage Path:	Customize
Multilevel Folder Name:	aa/bb/cc
Alarm Action File Name:	Default(YYYY-MM-DD)
Timing Snapshot File Name:	Default(YYYY-MM-DD)

Figure 10

Step12: Click “Test”, you can see the text file in :E:\Test\2018-07-26.

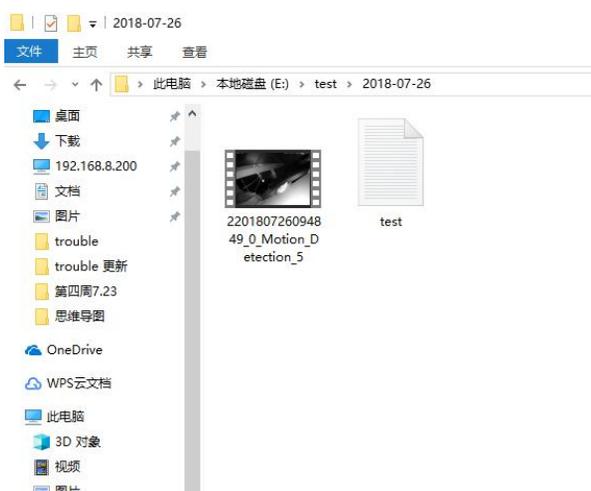


Figure 11

At this point, it means that FTP server has been built successfully.

3. FTP Application in Alarm

In order to guarantee that video recording files can be uploaded to the FTP server when the alarm is triggered, we need to make sure that the FTP server settings are correct.

Step1: Log in web side: “Advanced Settings”→“Alarm”→“Alarm Action”, check “Upload Via FTP”. Choose a different file format for videos or photos to be uploaded.

Alarm Action	
Save Into SD Card:	<input type="checkbox"/> File Format: AVI (Please insert SD card.)
Save Into NAS:	<input type="checkbox"/> File Format: AVI (Please mount NAS.)
Upload Via FTP:	<input checked="" type="checkbox"/> File Format: AVI
Upload Via SMTP:	<input type="checkbox"/> File Format: JPG
Alarm to SIP Phone:	<input type="checkbox"/> (Please open the SIP.)
HTTP Notification:	<input type="checkbox"/>

Figure 12

Step2: Set alarm. After the alarm has been triggered, you can see video files in route:
E:\Test\2018\07

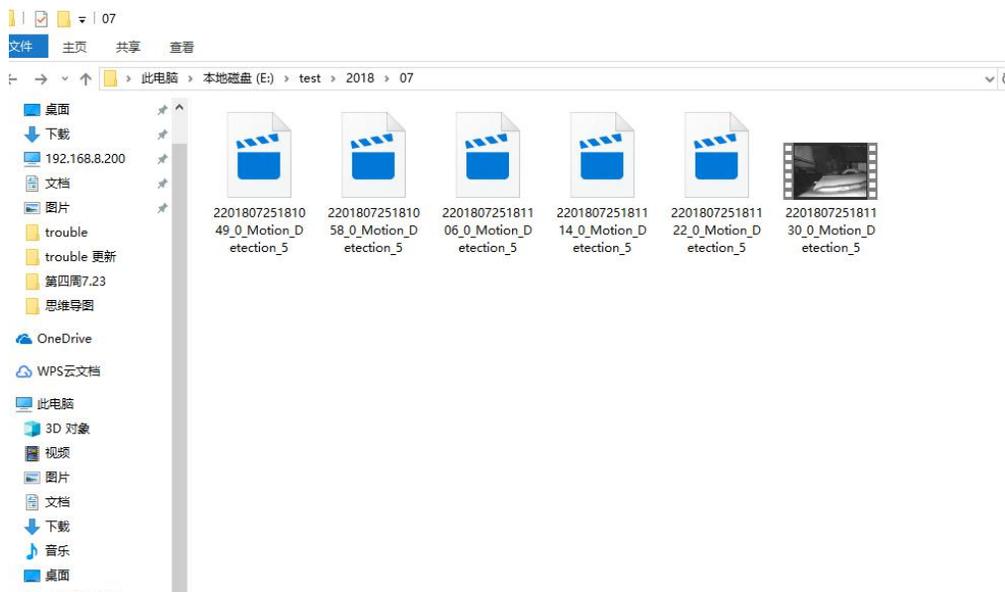


Figure 13

4. Access FTP

Enter the ftp://192.168.8.175, than fill in the user name and password.

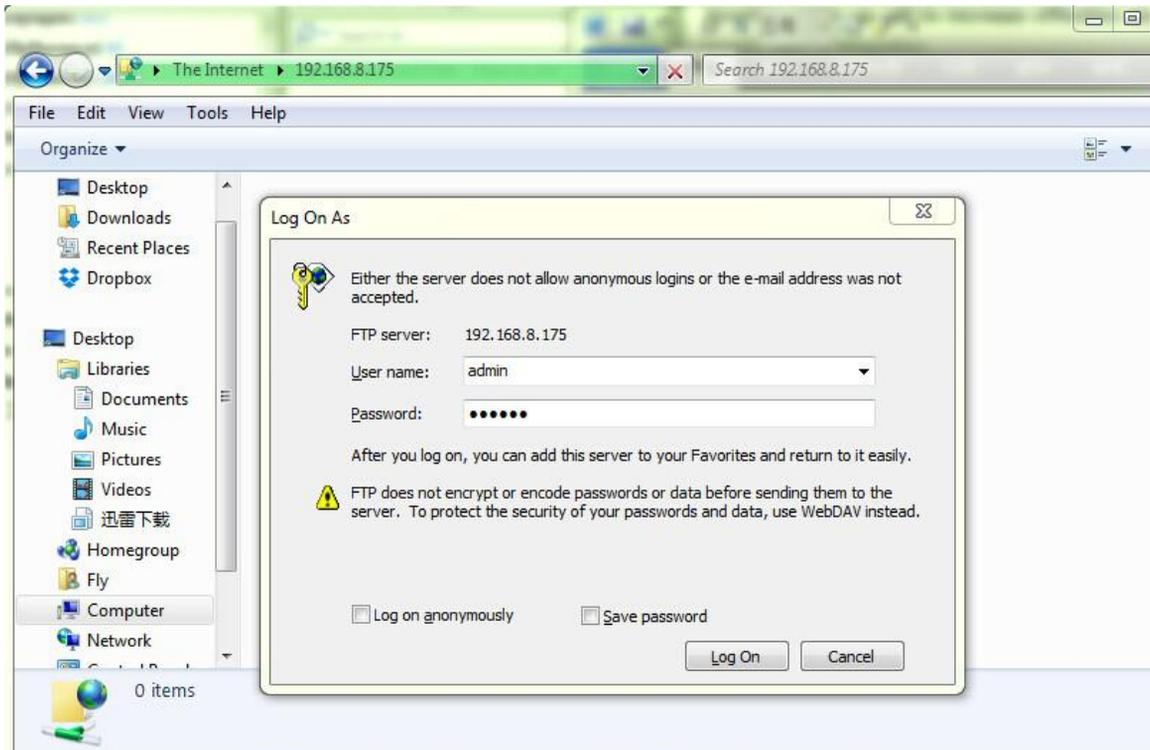


Figure 13 Access via FTP

All the files will be listed according to the different dates when they were recorded:

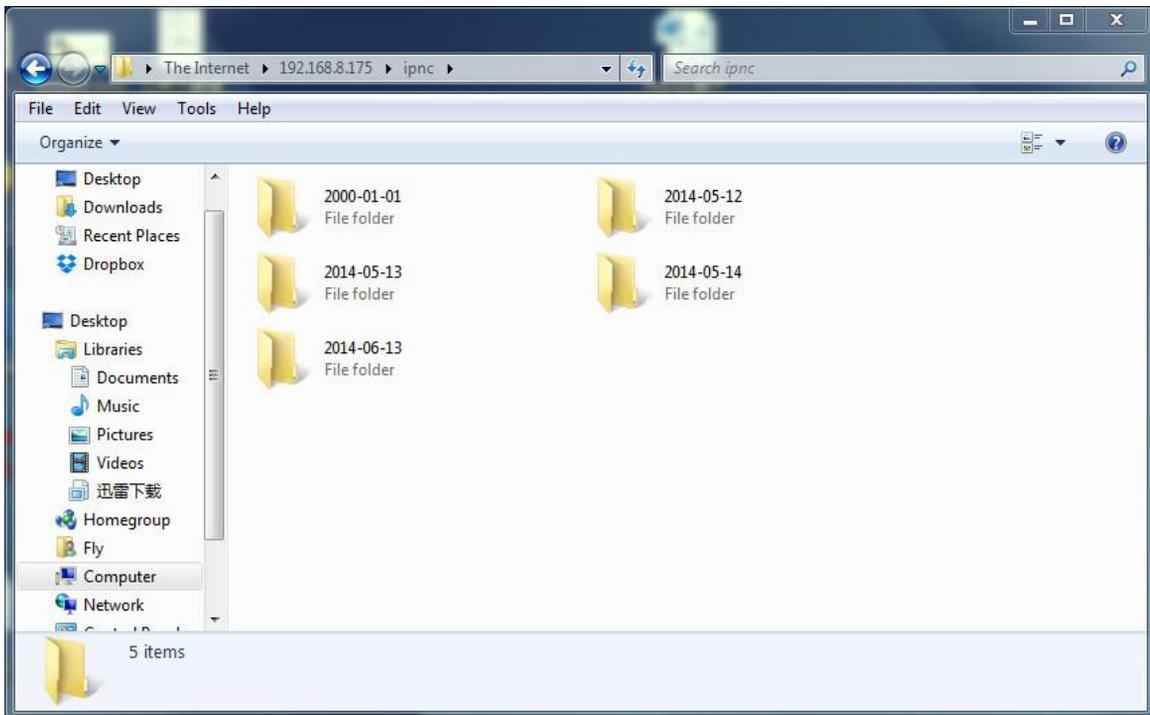


Figure 14 Access via FTP

-END-