



Milesight-Troubleshooting Motion Detection on Dahua NVR

IP Camera Version	XX.6.0.46	Update	2016.8.31
NVR Version	V2.3.7.2		


IP Cameras of Milesight are compatible with Network Video Recorders of Dahua. **By following the sequence of enabling IP Cameras' motion detection function first, setting detection region and detection schedule first next, and choosing alarm actions on the NVR last,** you can have a better experience on security surveillance. The following are the detailed steps.

Step1: Log in web, and go to “Advanced Settings”→“Alarm”. Tick “Enable Alarm” and choose “Trigger Type” as “Motion Detection”;

Enable Motion Detection:

Onvif Motion ActiveCells Settings: Normal

Set Motion Region

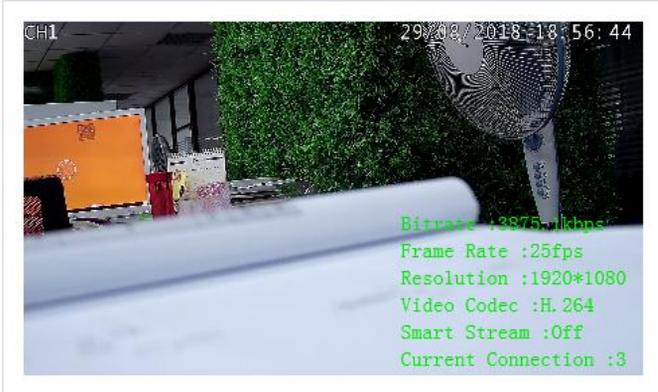

Select All
Clear All

Note: Please draw the screen for setting!

Sensitivity
5

Figure 1 Motion Detection Settings on IP Cameras

Step2: Set motion region and choose the sensitivity;



Figure 2 Motion Detection Settings on IP Cameras

Step3: Set the schedule for motion detection;

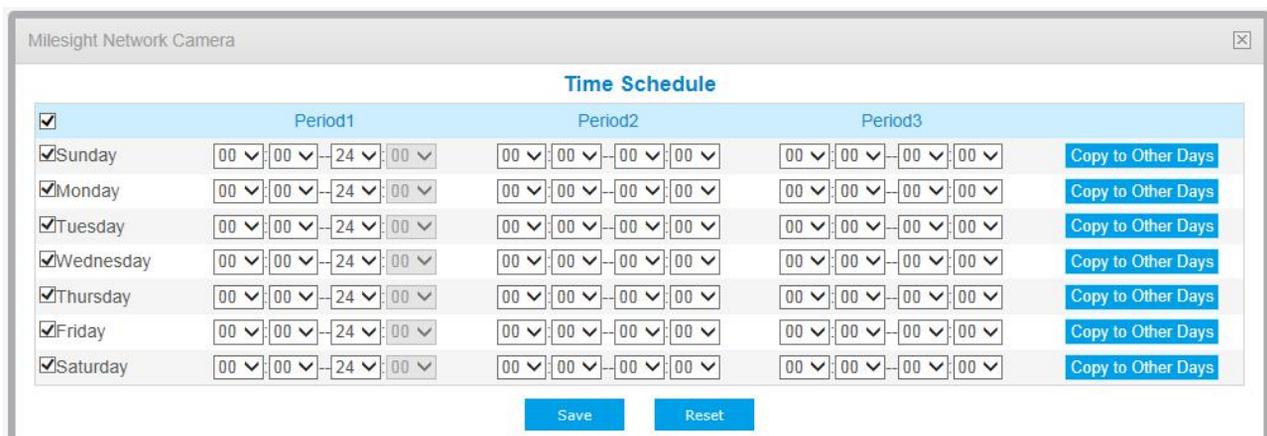


Figure 3 Motion Detection Settings on IP Cameras

Step4: Check settings of IP cameras. After setting motion detection successfully, you will see a red warning spot on the live video page;

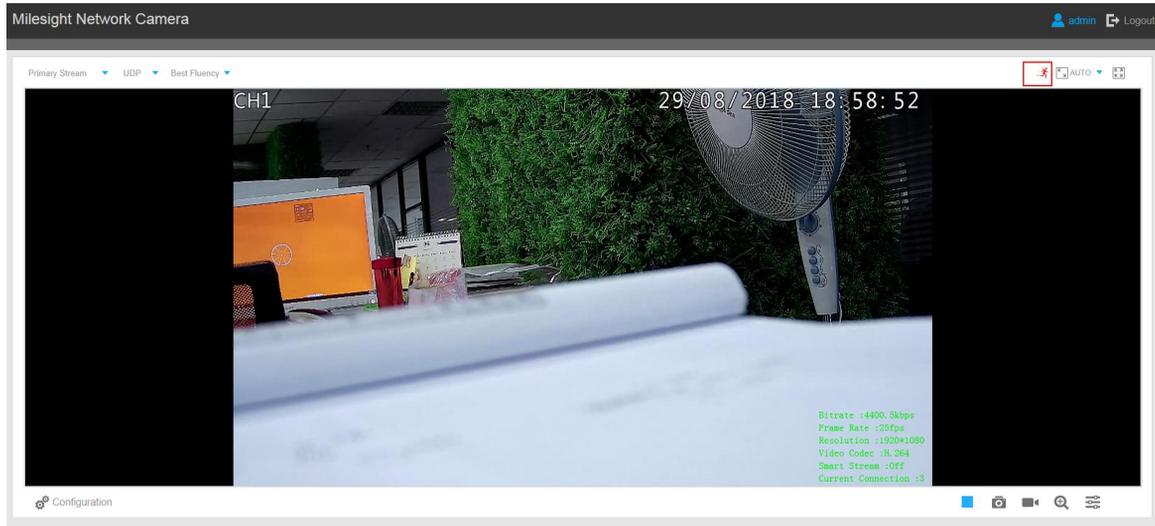


Figure 4 Motion Detection Settings on IP Cameras

Step5: Log in the NVR, and then go to “Main menu”-> “Setting”-> “Detect”. Select a channel from the drop-down list and then check the “Enable” button to enable motion detect function.

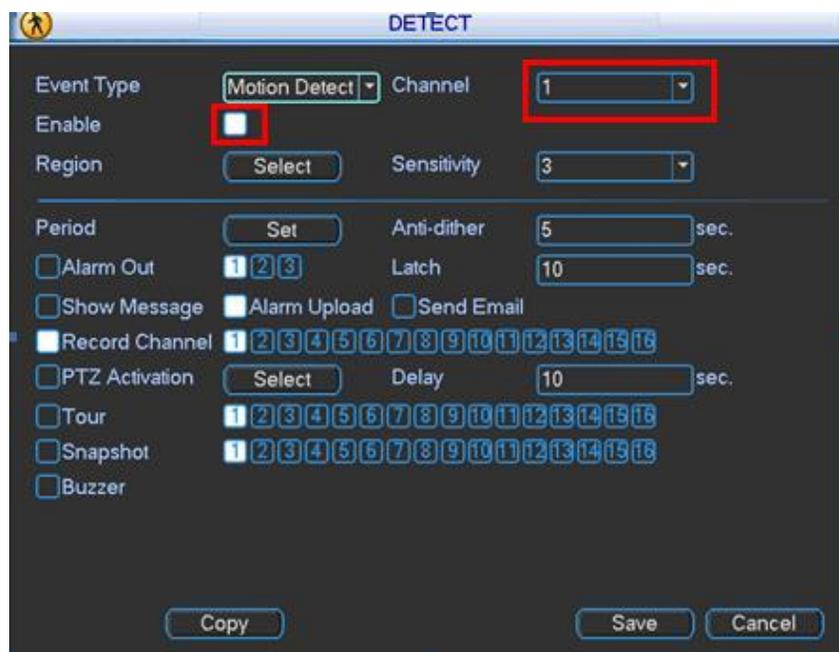


Figure 5 Motion Detection Settings on the NVR

Step6: You don't need to set region and sensitivity on the NVR, just choose the alarm actions and the corresponding periods you want. Do remember to click “Save” button to complete motion detect setup;

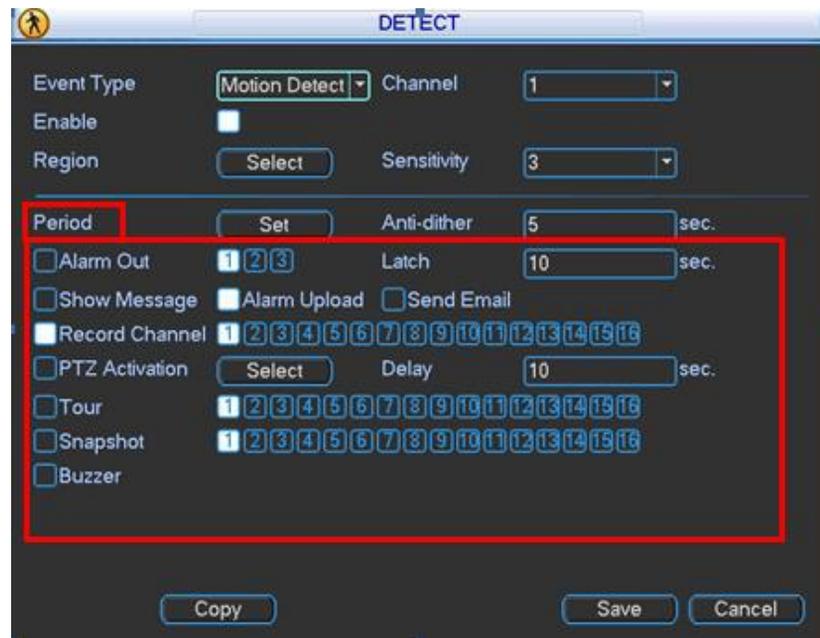


Figure 6 Motion Detection Settings on the NVR

Step7: Go to “Menu” → “Setting” → “Schedule”, select a channel from the drop-down list and highlight the recording type as “Motion” and edit the timetable according to your need. After that, device will record automatically if alarm is triggered;

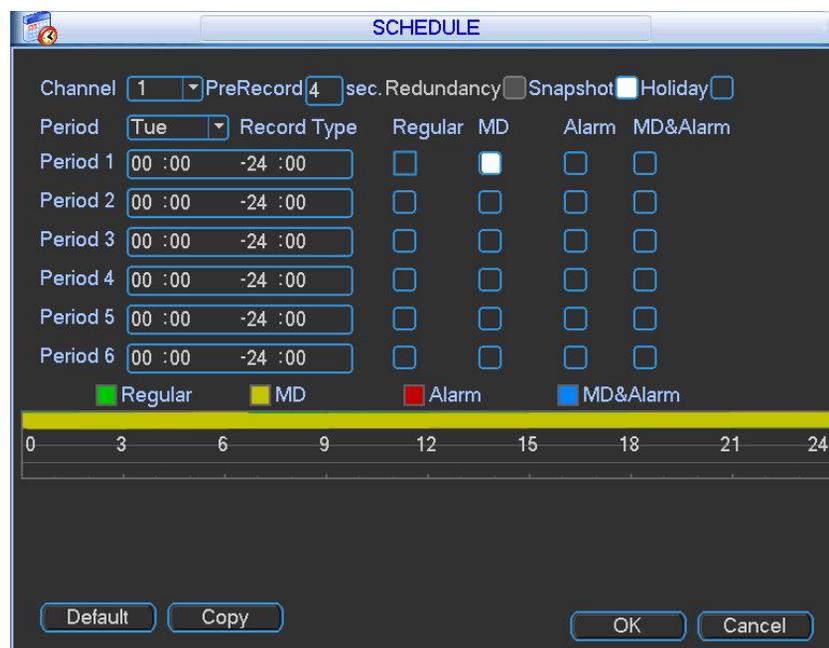


Figure 7 Motion Detection Settings on the NVR

Step8: Check. If motion detection is set successfully, you will see icon  for alarming and icon  for motion recording on the live view when the alarm is triggered;

-END-