




Milesight-Troubleshooting ANR

NVR Version	XX.9.0.6	Update	2019.10.22
--------------------	-----------------	---------------	-------------------

1. What is Milesight ANR?

Milesight NVR ANR (Automatic Network Replenishment) function:

Generally, NVR stores videos when network connection is normal between NVR and cameras. When the connection lost, the camera would start **continuous recording** and store videos in SD card instead. Then after reconnection, NVR automatically retrieves missed continuous videos from camera SD card in a period of time to prevent data missing.

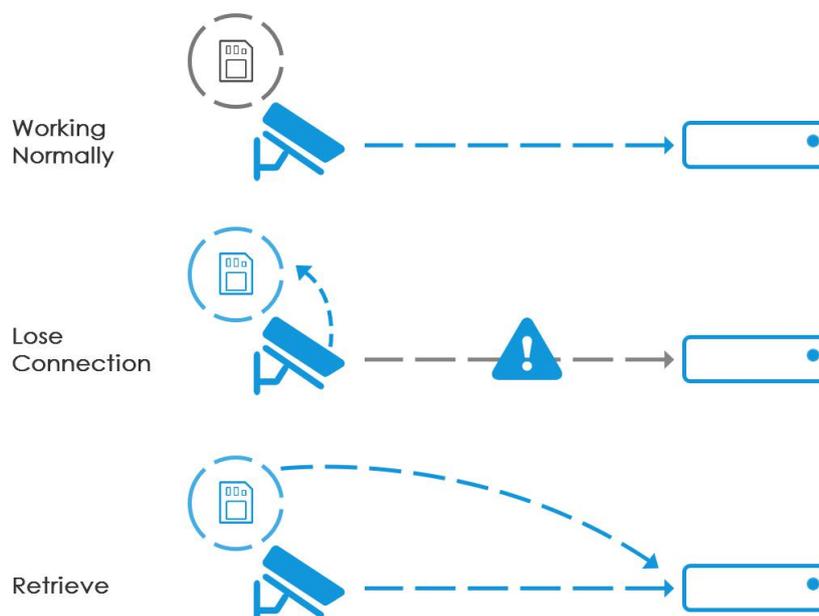

2. How to set ANR?

There are three notes need to be checked before setting ANR:

- ① Ensure that your devices are with the correct firmware versions.
Camera: V4X.7.0.72 or above
NVR: V7X.9.0.6 or above
Firmware download link: <https://www.milesight.com/support/download#firmware>
- ② Camera with available on-board SD card.
- ③ Camera should be added to NVR by **MSSP** protocol.

Then, you can find the ANR option in NVR Storage -> Record Settings interface.

Enable to start the function.

Note:

- ① No matter whether NVR has recording schedule or not, camera will do ANR recording and then retrieve back to NVR when reconnection.

- ② Camera plugged to PoE NVR does not support ANR function.

Pre Record	Disable
Post Record	Disable
Audio Record	Enable
Record Stream Type	Primary Stream
Video Due Time	Unlimit
ANR	Enable

3. Check ANR Recording on Playback

After retrieve, you can check ANR video with orange color on NVR Playback -> General Playback time bar.

The screenshot displays the NVR playback interface. The main video area is black. On the right, the 'General Playback' panel shows a list of 16 channels, with 'CAM 1' selected. Below the list is a calendar for September 2019, with the 9th highlighted. At the bottom, a time bar shows a sequence of colored segments: blue (General), orange (Event), and red (Event). A red arrow points to the orange segment on the time bar, indicating ANR recording.

-END-