



Milesight

## Milesight-Troubleshooting NVR Hard Disk Installation

Milesight Technology Co.,Ltd.

NVR Models	MS-N7016/MS-N8016	Update	2015.07.17
------------	-------------------	--------	------------

## 1. MS-N7000 series Hard Disk Installation

**Step1:** Unscrew the back and both sides' screws to open the upper lid.



Figure 1-1



Figure 1-2



Figure 1-3

**Step2:** Install the hard disks into NVR with screws showed in below pictures.(SATA Slots of hard disk should be **toward inside** NVR.)

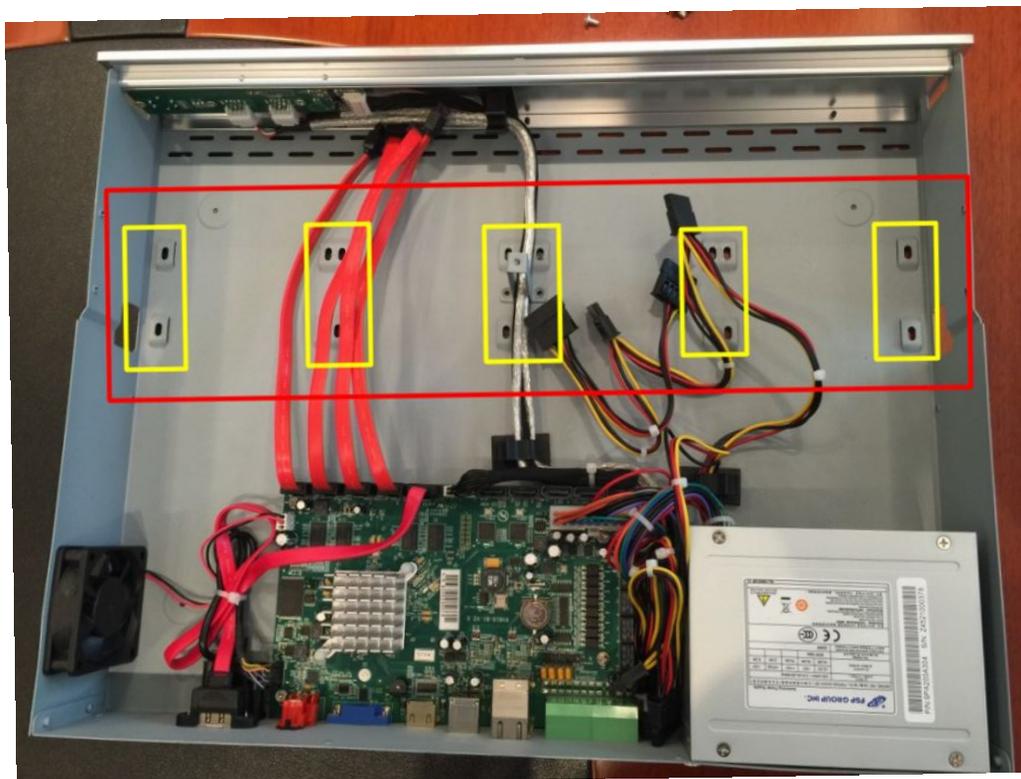


Figure 1-4



Figure 1-5



Figure 1-6

**Step3:** Join the power and data connectors to corresponding hard disk.

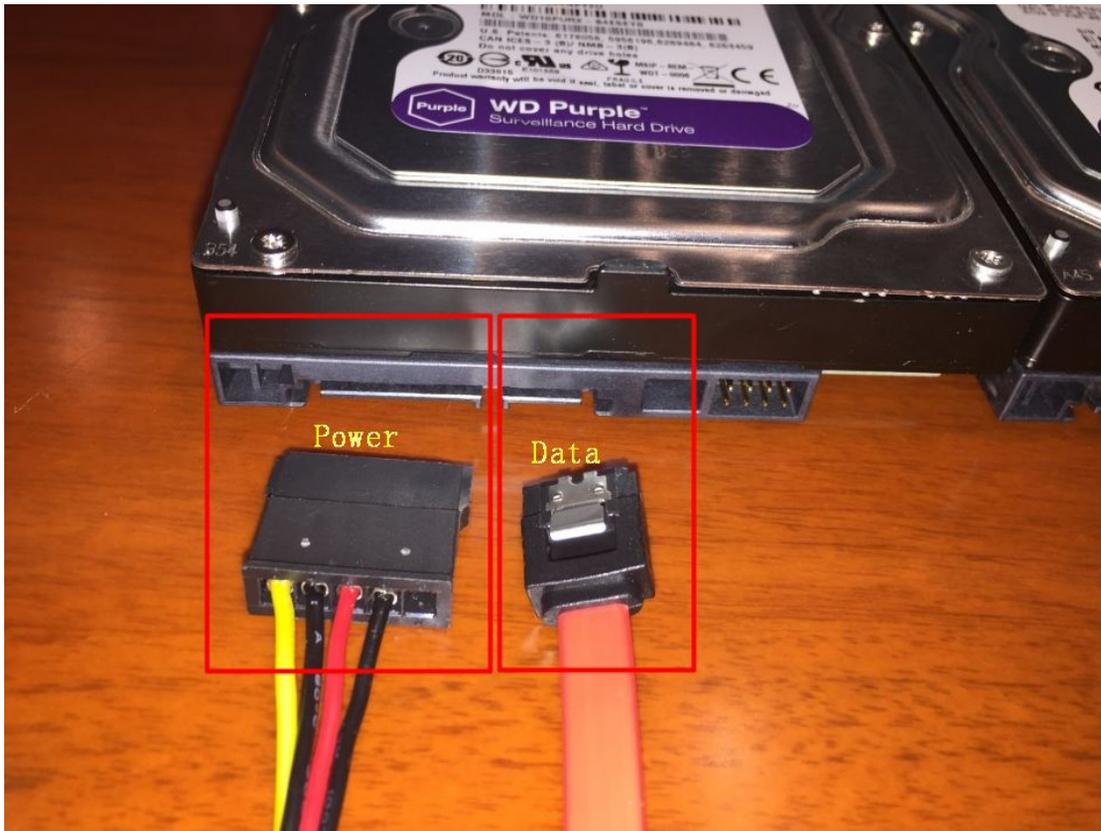


Figure 1-7

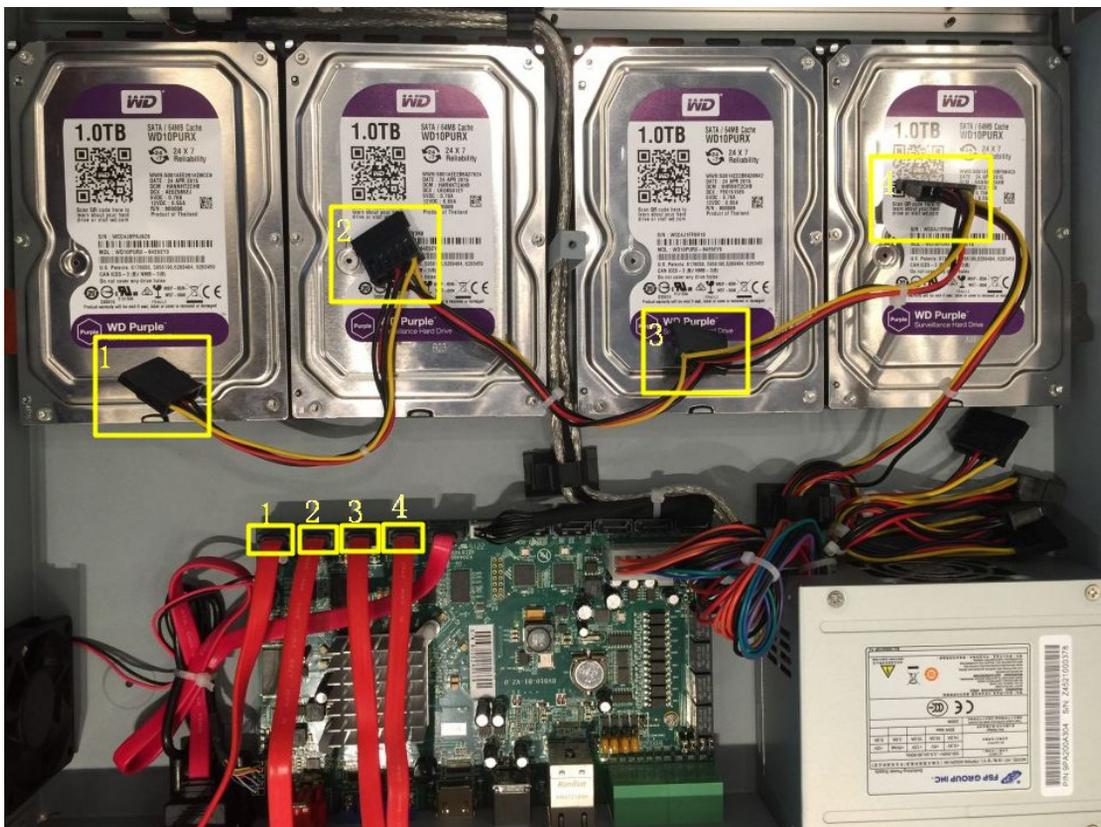


Figure 1-8

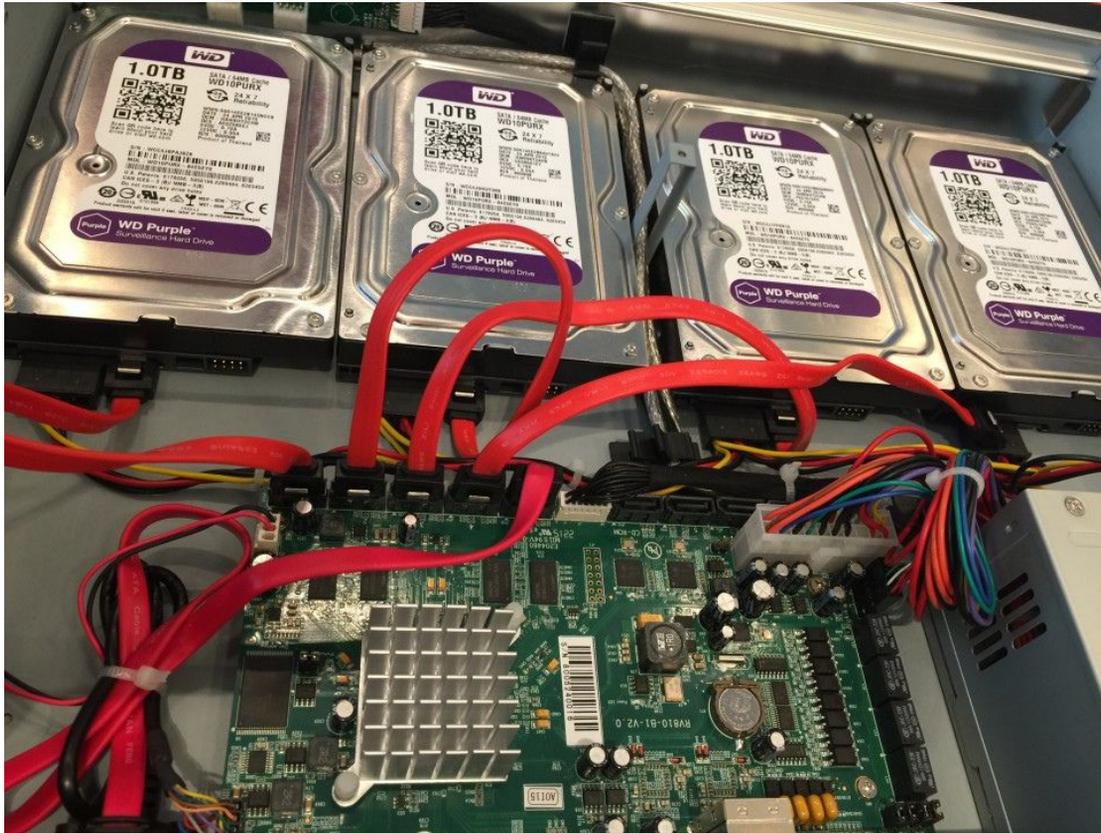


Figure 1-9

**Note:**

The data connector sequence of MS-N7000 series is different from MS-N8000 series'.

## 2. MS-N8000 series Hard Disk Installation

**Step1:** Unscrew the back and both sides' screws to open the upper lid.



Figure 2-1



Figure 2-2



Figure 2-3

**Step2:** Uninstall the upper hard disk panel.



Figure 2-4

**Step3:** Install the hard disks into NVR with screws showed in below pictures.(SATA slots of hard disks should be **toward inside NVR**)

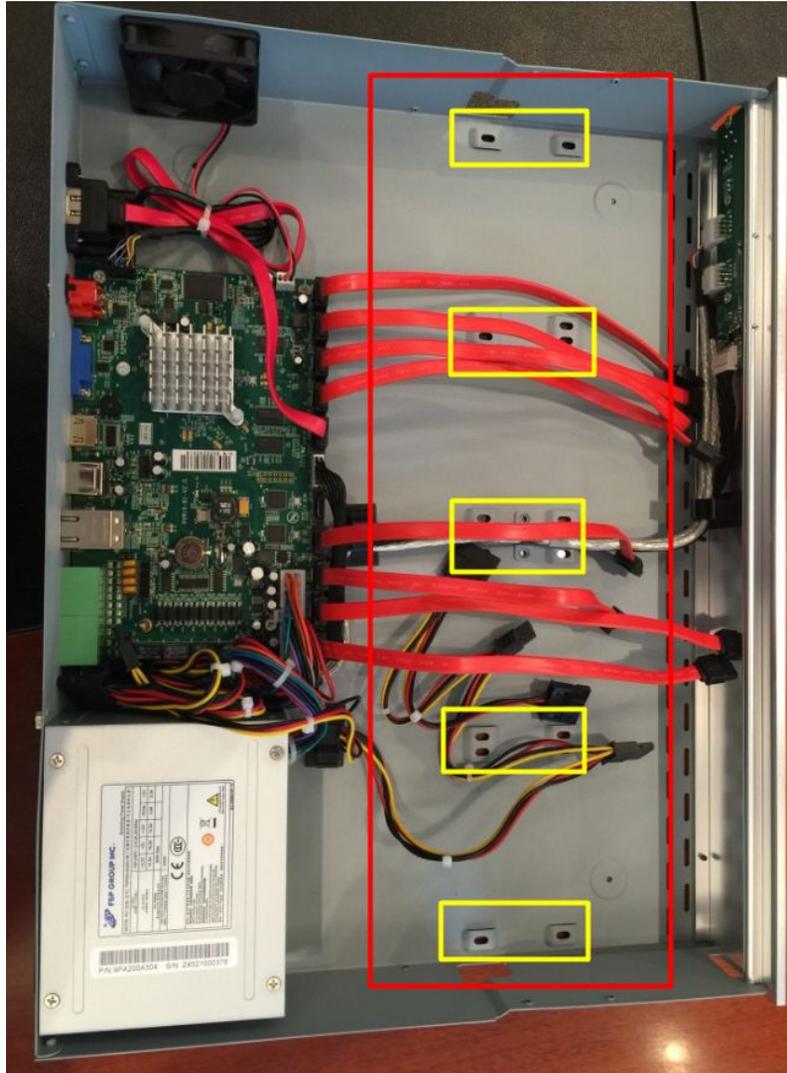


Figure 2-5



Figure 2-6



Figure 2-7

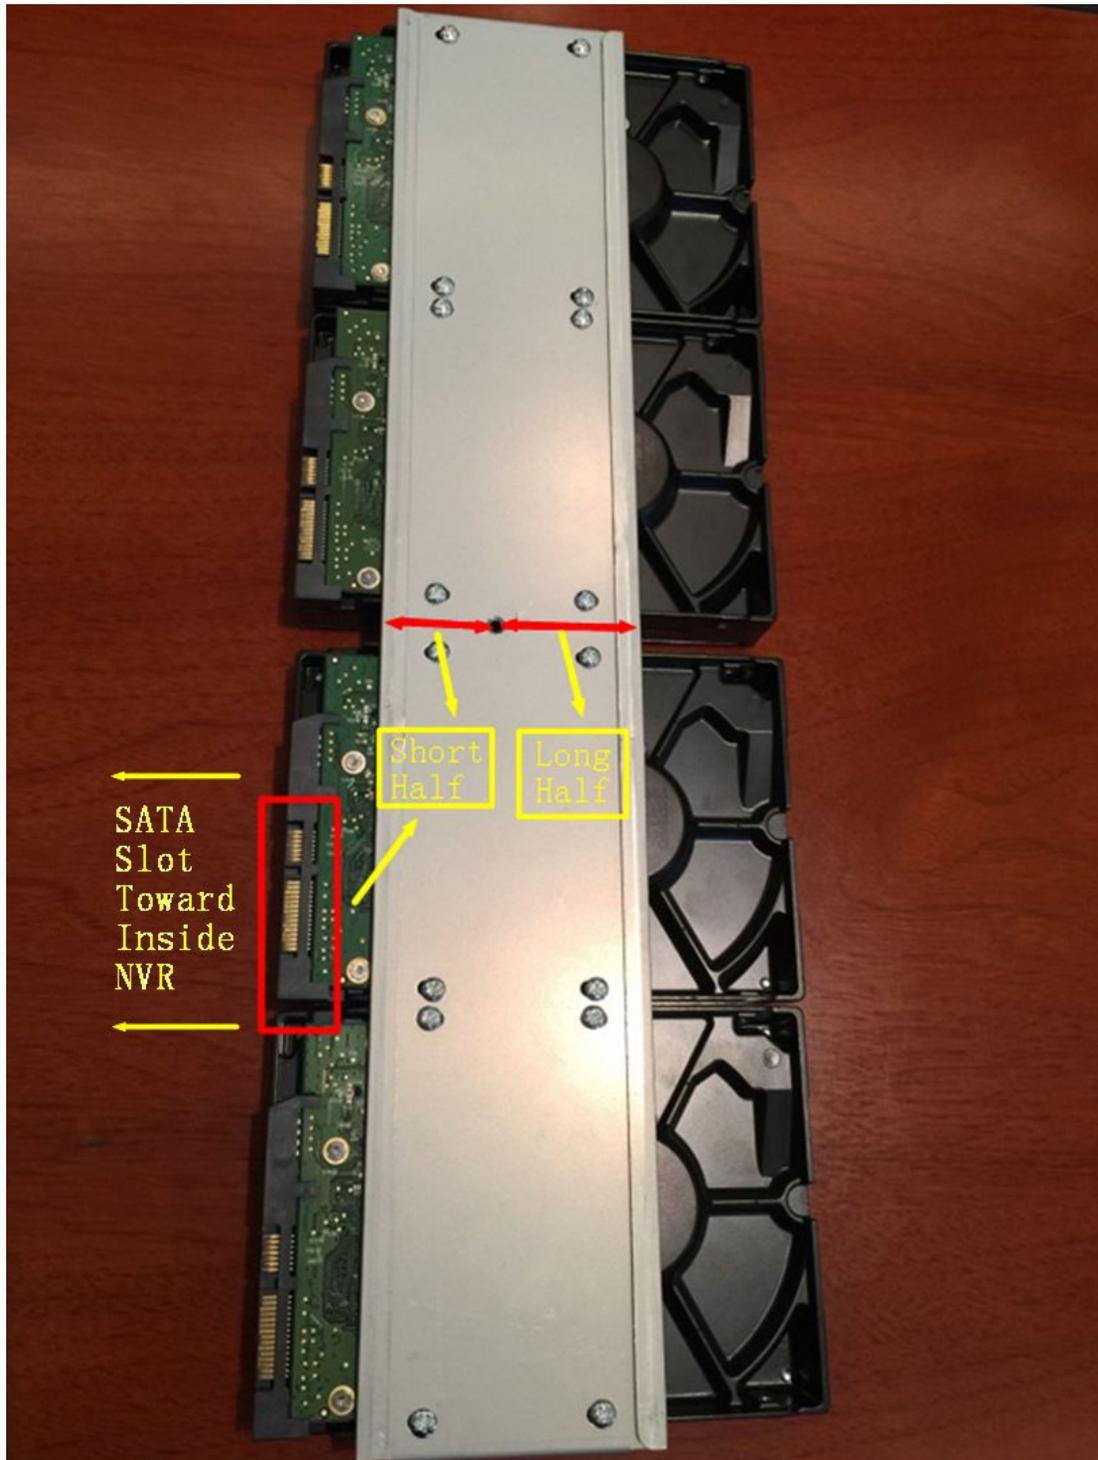


Figure 2-8

**Note:**

Make sure that the sata slots are in SHORT HALF side and the sata slot toward inside NVR.

**Step4:** Join the power connectors to corresponding hard disks.(Install lower hard disk panel **before** upper one)

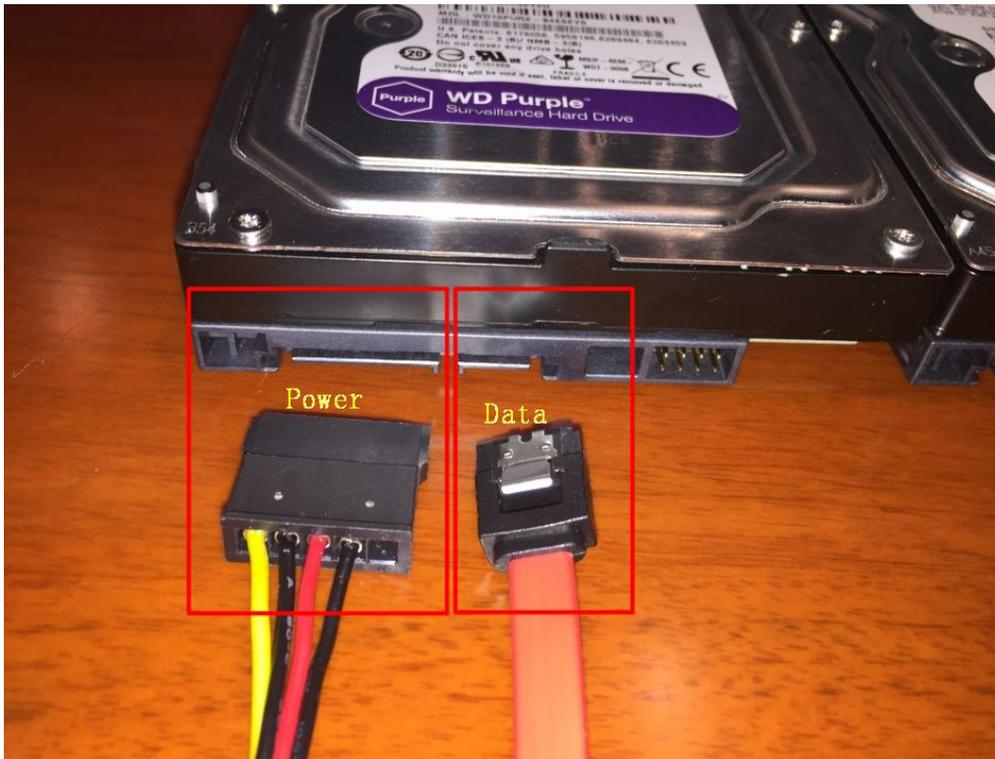


Figure 2-9



Figure 2-10

**Step5:** Join the data connectors to corresponding hard disk.(Check the connection by below sequence)



Figure 2-11

**Note:**

The data connector sequence of MS-N7000 series is different from MS-N8000 series'.